

BOOMTENT INSTALLATION

Set your boomtent on the boom just behind the mast facing the arrow in the correct direction. Cut ties and roll cover along the boom to the topping lift allowing material to fall to either side of the boom, start topping lift zipper and tie collar around the topping lift. Peel the forward triangle of the boomtent forward and around the mast and start the zipper around the mast. Wrap the collar around the mast and use tie to secure. Continue the zippers down from the mast to the shroud and finish any other zippers and collars for the shrouds. Tie out to the stanchions using the ties along the edge of the boomtent just in the shroud area, making sure you tension properly to keep the shroud openings in place. Now you finish the topping lift zipper and tie stern corners. (some boats might need a rope tied under the hull if the stern cleats aren't at the corner of the deck). Now tension the bow triangle of the boomtent to the headstay base (double up on the rope).

Lastly tie the remainder stanchions between rig and stern corner, rig and bow. Transome between the corners can be tie to ladder posts, swim handles ect. (need to get creative since there are no welded bails on the base of stern rails.

IMPORTANT: if you find that the stern edge of your cover is not covering the helm, drop the boom a few inches. This will require you to retension your stanchion ties.

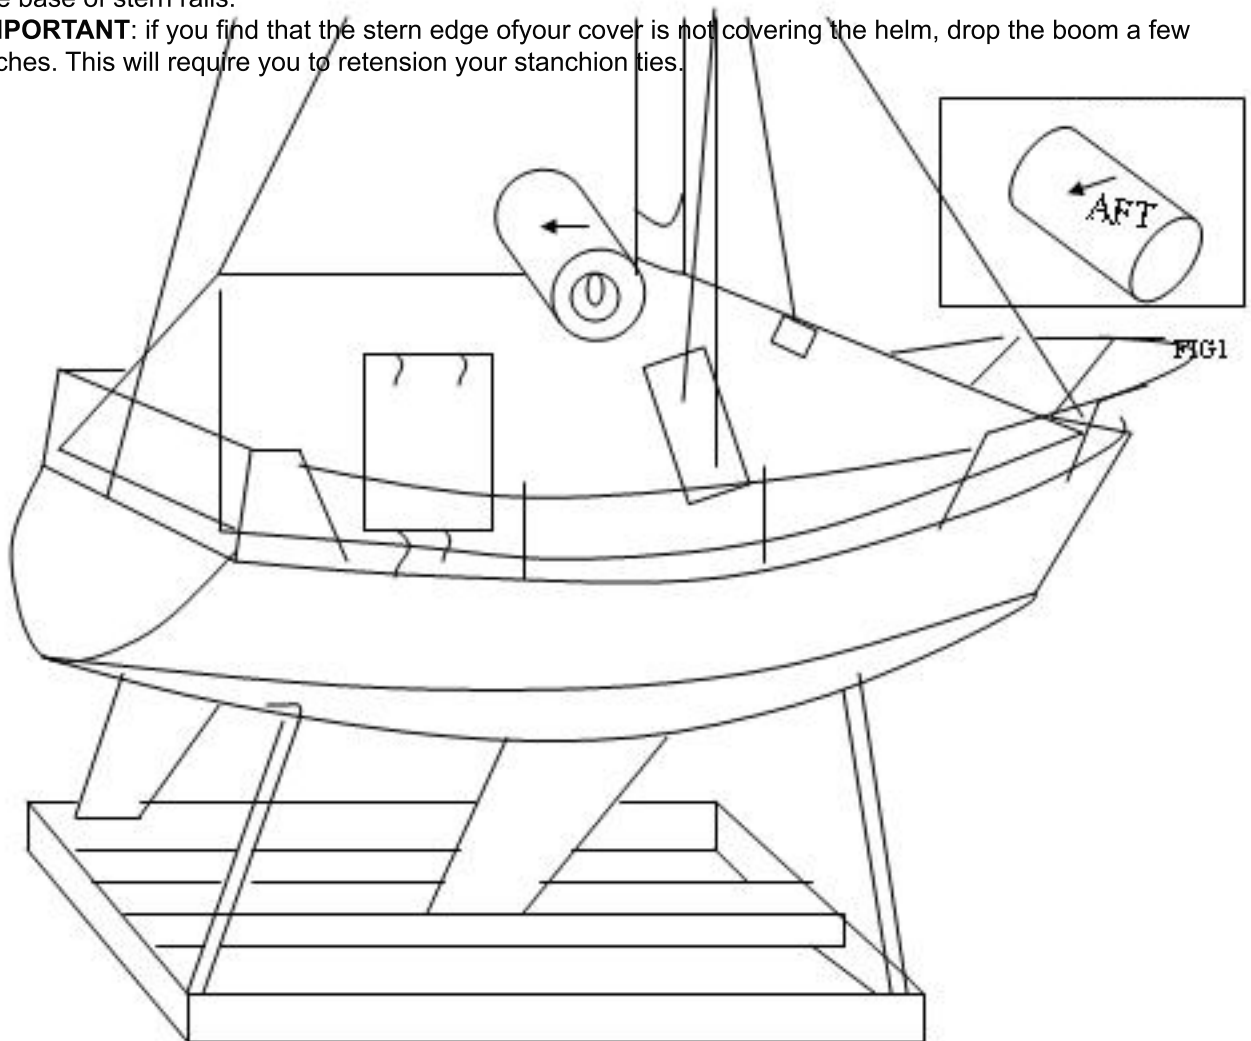


Fig.11